

ElectroReact




Electrode Carrier




Foil

~80mm x 5mm

1. Insert end and fold around base

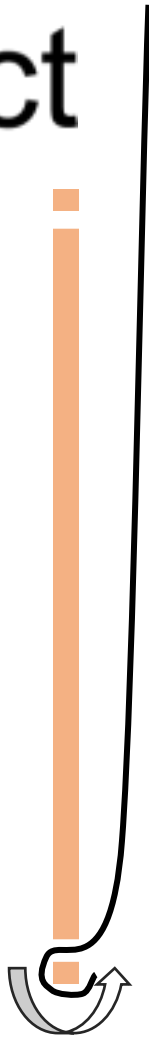


3. Gently tension before threading through

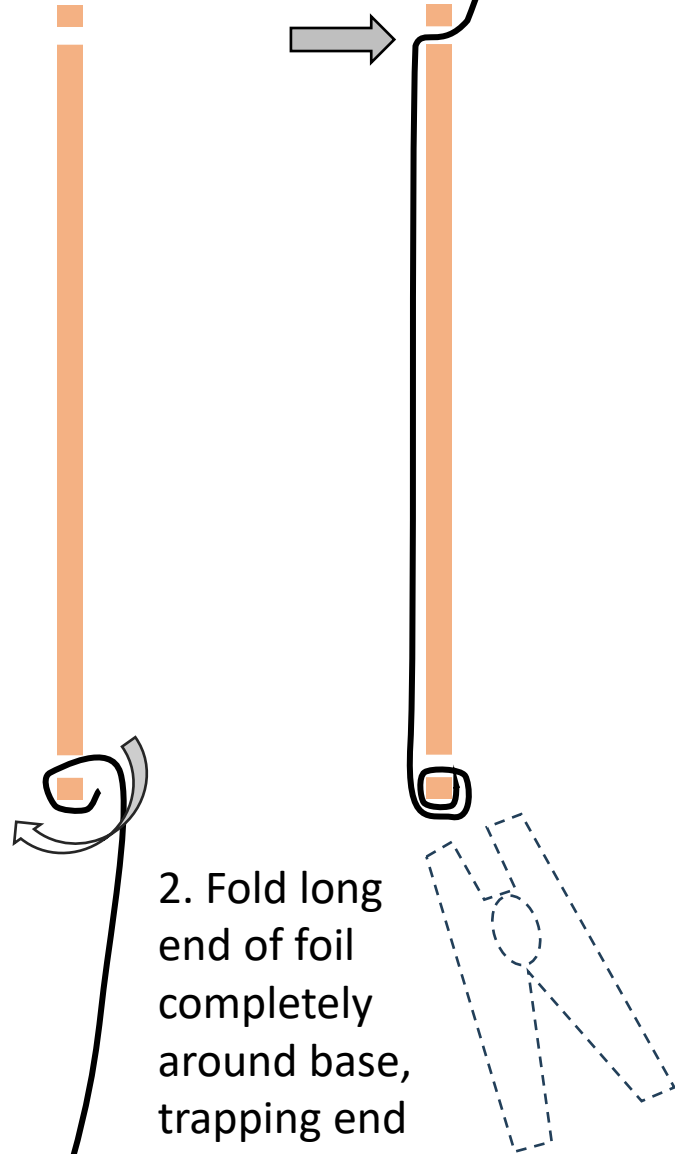

2. Fold long end of foil completely around base, trapping end



4. Fold over

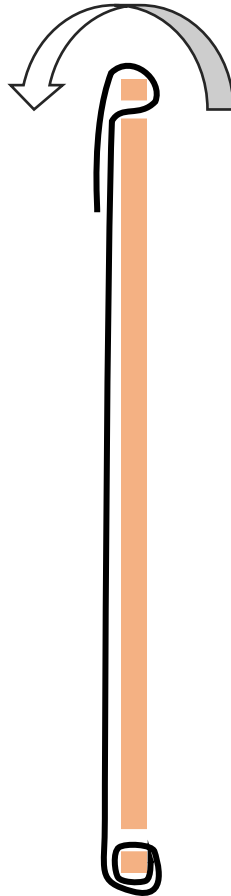

Fasten top of electrode into cap

Bottom of electrode

Top Tip: Clipping the foil after you trap the end with a soft tipped peg can help!